INSTALLATION STEP-BY-S TEP GUIDE

Learn More At
www.peelmirrorinsert.com

VIEW INSTALLATION VIDEO

Included in the box:

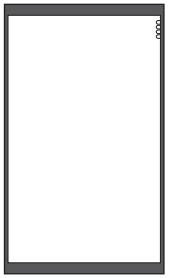

Mirror Insert



Clamps (Brackets)

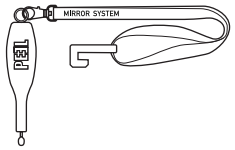

Film Pick and
Mirror Removal Key

Not Included, Required Tools



CR-V T25H
Security Bit.



11/32 Socket

First Time Replacement

1

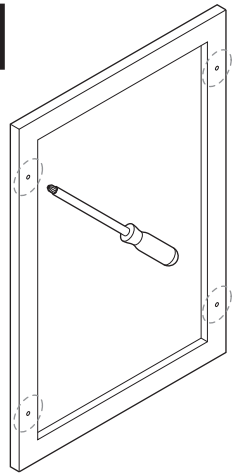

Remove all (4) security screws from Sentry Mirror SystemTM frame. Requires CR-V T25H Security Bit.

2

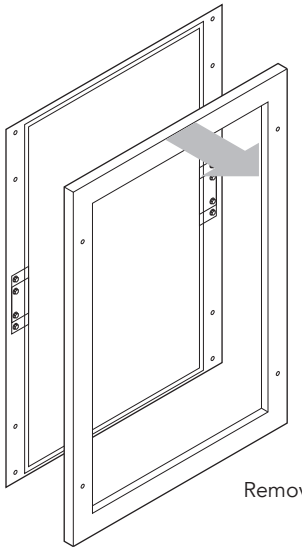

Remove frame

3

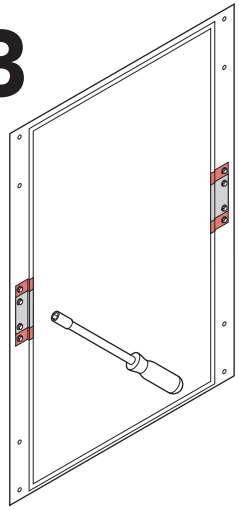

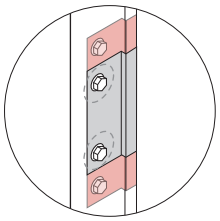

Remove (4) nuts off **gray bracket (2 on right & 2 on left)**, requires 11/32 nut driver. (do not touch the nuts on red clamps)

4

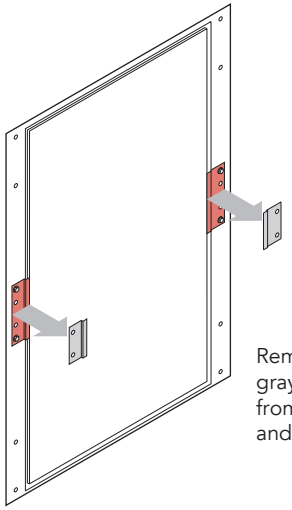

Remove small gray brackets from left side and right side

5

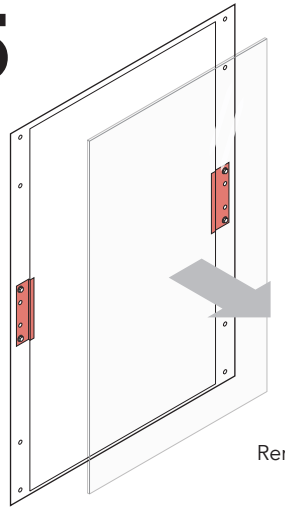

Remove acrylic insert

6

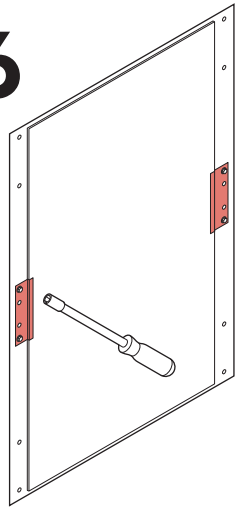

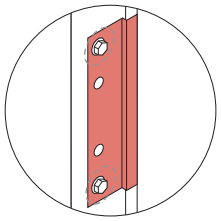

Remove red clamps by removing (4) 11/32 nuts (2 of right & 2 on left). (use caution when doing so, the mirror will become unsecure and can fall forward)

7

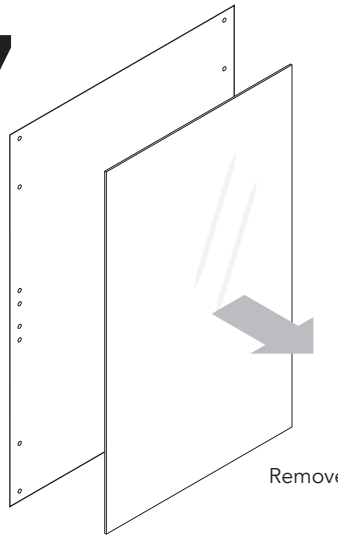

Remove mirror

8

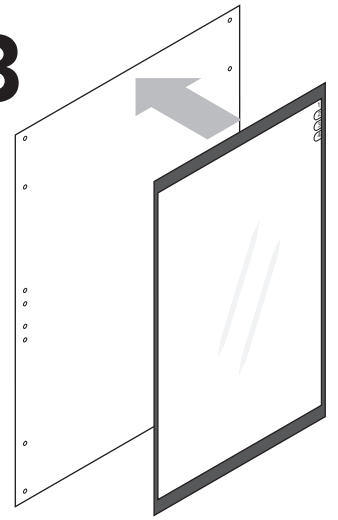

Replace with PEEL Mirror Insert

9

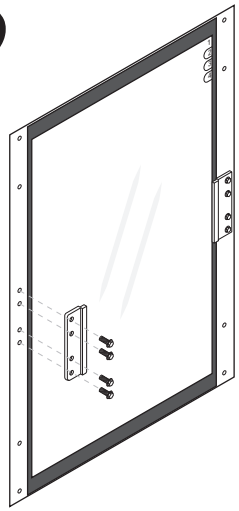

Utilize yellow replacement clamps included with the PEEL Mirror Insert

10

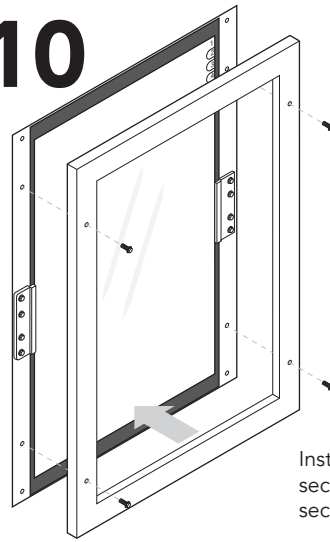

Place frame and align

Install all (4) outer security screws to secure frame

Insert Only Replacement

1

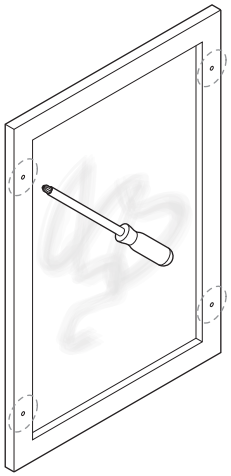

Remove all (4) security screws from Sentry Mirror SystemTM frame. Requires CR-V T25H Security Bit.

2

Remove frame

3

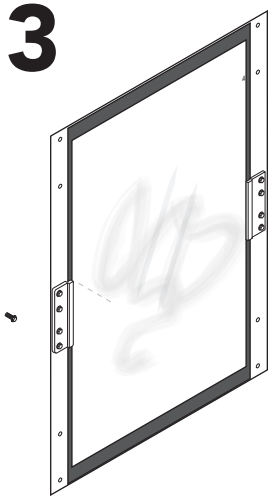

Remove (4) nuts off PEEL clamp, requires 11/32 nut driver.

4

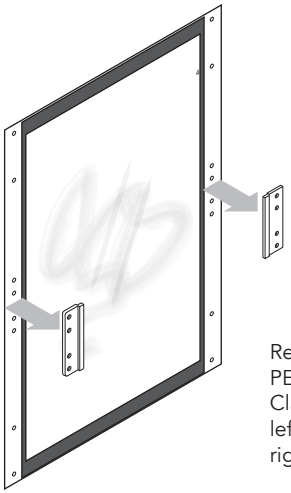

Remove PEEL Clamps from left side and right side

5

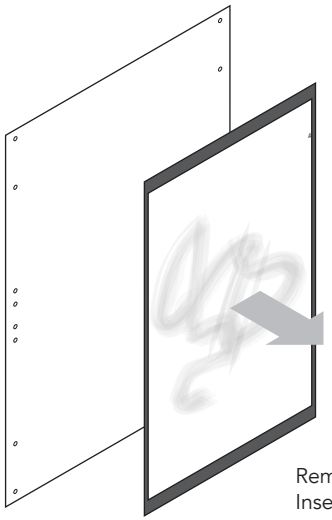

Remove PEEL Insert

6

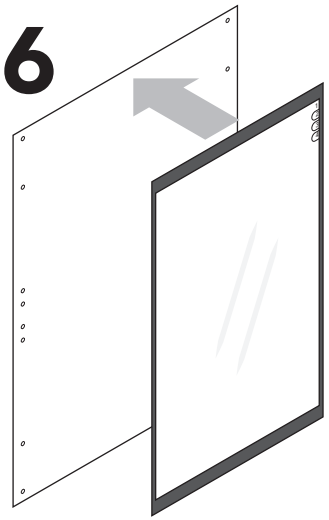

Replace with PEEL Mirror Insert

7

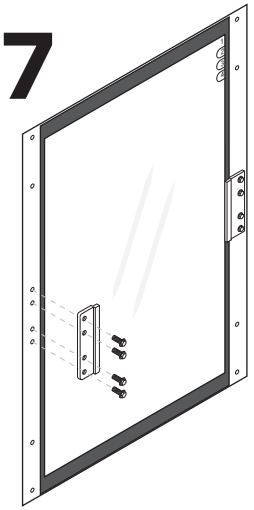

Reinstall PEEL clamps included with the PEEL Mirror Insert

8

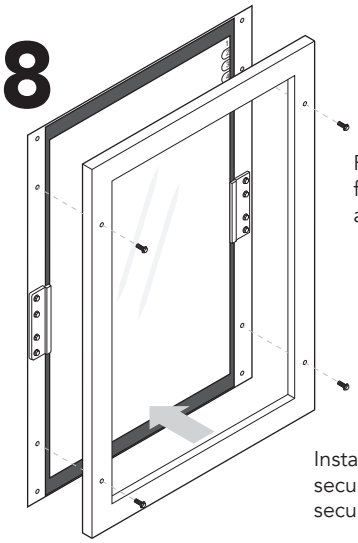

Place frame and align

Install all (4) outer security screws to secure frame

How To Peel Layers

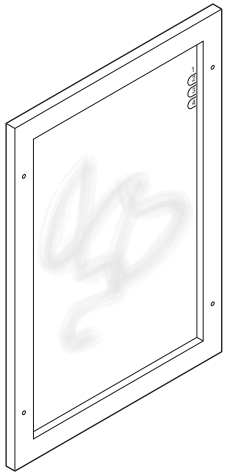

Once the PEEL Mirror Insert is vandalized simply utilize the pick removal tool to peel away the top layer of film revealing a clean un-vandalized layer underneath.

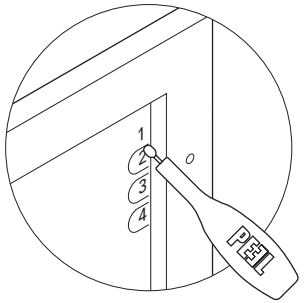

Utilize the film pick to remove the top, damaged layer.

Place the film pick just below the numbered layer you'd like to remove, hook up and pull away

VIEW INSTALLATION VIDEO

PEEL™
MIRROR INSERT